




The P08 "Luger"



Detailed Drawing and Parts List

1. Barrel
2. Frame
3. Receiver
4. Breechblock
5. Extractor
6. Extractor Pin
7. Extractor Spring
8. Forward Toggle Link
9. Breechlock Pin
10. Rear Toggle Link
11. Toggle Axle
12. Toggle Axle Pin
13. Coupling Link
14. Coupling Link Pin
15. Ejector
16. Trigger Bar Plunger
17. Trigger Bar Spring
18. Firing Pin
19. Firing Pin Spring
20. Firing Pin Spring Guide
21. Receiver Axle

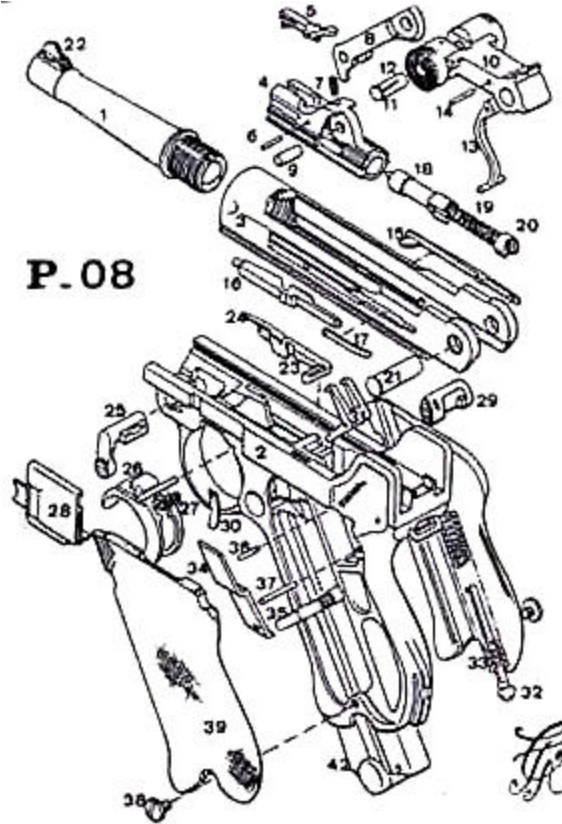

22. Front sight
23. Hold Open Latch
24. Hold Open Latch Spring
25. Locking Bolt
26. Trigger
27. Trigger Spring
28. Trigger (Slide) Plate
29. Magazine Catch
30. Magazine Catch Spring
31. Recoil Lever
32. Mainspring Guide
33. Mainspring
34. Safety Bar
35. Safety Catch
36. Safety Pin
37. Recoil Lever Pin
38. Grip Screw
39. Grips
42. Magazine

1. Push on the magazine latch



2. Get the magazine out



3. Unscrew the Grip screw at the bottom of the Grip



4. Hit the frame with the rear of the screwdriver to get the Safety Catch out.



5. Push back the barrel to make the Receiver back up



6. Keep the barrel back and turn the Locking Bolt to the bottom




7. Push on the Trigger (Slide) Plate and remove it



8. Slide the Barrel-Receiver group to the front to remove it




9. Push the Receiver Axle from the right to the left ...

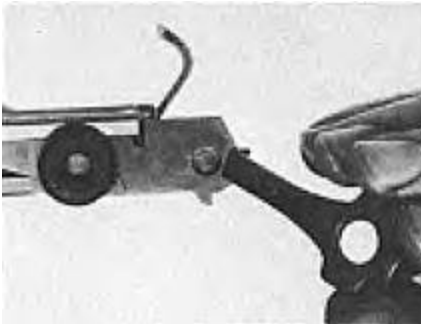

10. ... and remove it.



11. Push the Breechlock group to the rear

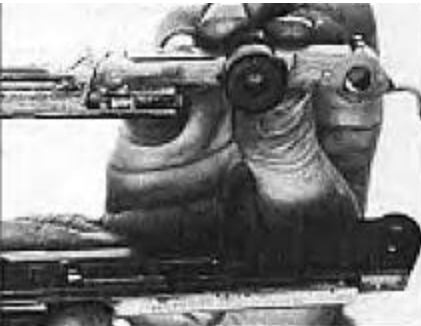


12. With a fine screwdriver push the Trigger Bar Spring



13. Extract Trigger Bar spring




14. Push Trigger Bar Plunger to the rear to disengage it from its axis

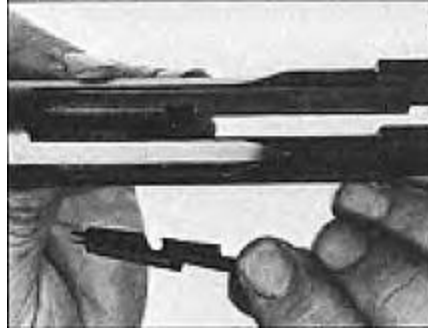

15. With a little screwdriver lift the ejector



16. Cautiously disengage the Ejector

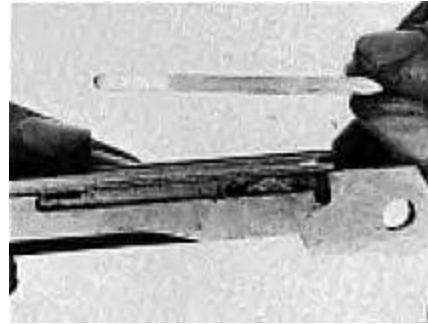

17. To break apart the Breechlock group you need to get rid off the Toggle Axis pin from the inside which might be difficult



18. Push away the Coupling Link Pin



19. With a screwdriver turn the Firing Pin Spring guide of 90° to the left while pushing on it



20. Get the Firing pin, spring and Guide



21. Break apart the different parts of the firing pin



22. Push the Extractor Pin



23. Remove the Extractor in pulling forward



24. Disengage Extractor's Spring



25. Take the Trigger from the front



26. Remove the Locking Bolt by pushing it to the left



27. While pressing on its superior part, turn the Magazine Catch Spring forward



28. Disengage the spring from the Magazine Catch hole



29. Push Magazine Catch from left to right



30. Lift the Hold Open Latch and push it to the rear



31. Remove the Hold Open Latch



32. From the inside of the rear of the frame push the Recoil Lever Pin



33. Remove this pin from behind the frame



34. Disengage the Safety Catch



35. Push the Safety Bar to the rear of the handle and remove it



36.



37. Push Recoil Lever Pin



38. Remove Recoil Lever



39. With a screw driver push Mainspring outside the frame



40. Disengage Mainspring and Mainspring Guide off the frame

